

Instruction Manual

HMV..E Hydraulic Nut

Use with H, & OH Series Adapters or AH Withdrawal Sleeves

Installation

Warning: The HMV..E Hydraulic Nut is an installation tool designed to assist with bearing mounting on a tapered adapter sleeve or withdrawal sleeve. After the bearing has been tightened, the HMV..E Hydraulic Nut must be replaced with the standard nut supplied with the adapter.

Tools Required: Feeler gauges, portable hydraulic pump, dial indicator to monitor axial drive up.

Note: Follow the standard installation instructions provided with the bearing and/or split block assembly to position the seals, bearing and adapter loosely on the shaft as close as possible to the final desired installed position. Using feeler gauges, and the steps suggested in the standard instructions, measure and verify the un-mounted internal clearance of the bearing and record this measurement. Verify this internal clearance for the bearing in the chart(s) in the standard manual. From these charts, identify the final mounted clearance recommended for the bearing. The bearing must be tightened until this final internal clearance level is reached. Record the final mounted clearance as well and keep with installation details.

1. Use HMV..E Hydraulic Nut (Fig. 1) to snug the bearing into position on the adapter. A bar spanner (Fig. 2) supplied with the HMV..E Nut can be used to hand tighten the hydraulic nut against the bearing. Place the spanner into the shallow hole shown in Fig 1 to tighten the nut. Once the nut is snug, connect the hydraulic pump to the nut as shown in Fig 3. An axial indicator access is also provided when measuring or tracking axial displacement is needed. **Important: measure and document the internal clearance of the bearing during the mounting process.**

Axial movement should only be used as a guide since the starting point is difficult to determine repeatedly. Chart 1 indicates the approximate axial movement to help determine the final position of the bearing. Use the axial movement only as a guide.



Fig. 1



Fig. 2

2. Continue to increase pressure to the hydraulic nut and measure the internal clearance frequently until the final recommended internal clearance is reached in the bearing. The pressure listed in the chart should also only be used as a guide. (The pressure to mount will vary between spherical roller bearing brands due to slight geometric and wall thickness differences.)

3. Once the final clearance is reached, release the pressure and remove the hydraulic nut. Install the lock washer and nut. The tapered side of the washer fits against the beveled side of the nut. Tighten the nut against the bearing and bend the nearest tab of the washer into slot on the OD of the nut. See Fig 4. **Note: If a Locking Clip is used instead of a Lock Washer (Size 44 and larger), locate the nearest locking slot so the clip fits into the notch in the adapter sleeve. This secures the Locking Clip.**

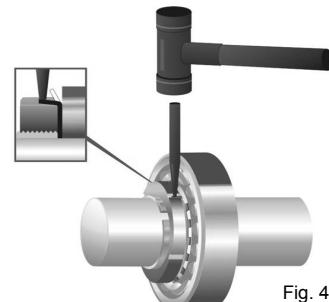


Fig. 4

4. Refer back to the Split Block Installation Manual to finish installing the seals, fixing rings, housing and for required lubrication.

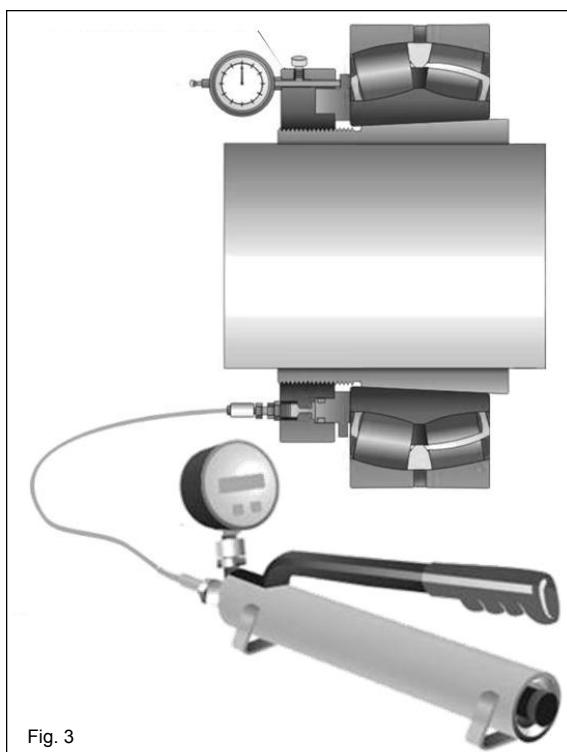


Fig. 3

ISO-9001:2008 Certified

P.T. International Corp.

1817 Westinghouse Blvd.
P.O. Box 411244 (28241)
Charlotte, NC 28273
Ph: 704-588-1091
Fax: 704-588-5738
www.ptintl.com
E-mail: info@ptintl.com

Hydraulic Nut Manual 1110

Warning: Because of the possible danger to person(s) or property from accidents which may result from the improper use of products, it is important that correct procedures be followed. Products must be in accordance with the engineering information specified in the catalog. Proper installation, maintenance and operation procedures must be observed. All instructions in the instruction manuals must be followed. Inspections should be made as necessary to assure safe operation under prevailing conditions. Proper guards and other suitable safety devices or procedures as may be desirable or as may be specified in safety codes should be provided, and are neither provided by P.T. International, nor are the responsibility of P.T. International. This unit and associated equipment in the system must be installed, adjusted and maintained by qualified personnel who are familiar with the construction and operation of all equipment in the system and the potential hazards involved. When risk to persons or property may be invoked, a holding device must be an integral part of the driven equipment beyond the speed reducer output shaft.

Chart 1 - Hydraulic Pressure & Axial Drive-Up Guidelines

222 Series Bearing	Hyd. Pressure*	Radial Clearance Reduction	Axial Drive-Up*	223 Series Bearing	Hyd. Pressure*	Radial Clearance Reduction	Axial Drive-Up*	230 Series Bearing	Hyd. Pressure*	Radial Clearance Reduction	Axial Drive-Up*
	psi	in	in		psi	in	in		psi	in	in
22210 K C3	100	0.0009	0.0136	22310 K C3	250	0.0069	0.0142	23022 K C3	150	0.0019	0.0247
22211 K C3	110	0.0010	0.0145	22311 K C3	270	0.0010	0.0153	23024 K C3	150	0.0021	0.0264
22212 K C3	140	0.0011	0.0156	22312 K C3	290	0.0011	0.0161	23026 K C3	180	0.0023	0.0283
22213 K C3	160	0.0012	0.0170	22313 K C3	310	0.0012	0.0175	23028 K C3	170	0.0025	0.0303
22214 K C3	150	0.0012	0.0178	22314 K C3	330	0.0012	0.0183	23030 K C3	180	0.0027	0.0320
22215 K C3	140	0.0013	0.0186	22315 K C3	360	0.0013	0.0195	23032 K C3	180	0.0028	0.0339
22216 K C3	150	0.0014	0.0195	22316 K C3	370	0.0014	0.0206	23034 K C3	190	0.0030	0.0358
22217 K C3	160	0.0015	0.0206	22317 K C3	400	0.0015	0.0217	23036 K C3	210	0.0032	0.0381
22218 K C3	190	0.0016	0.0217	22318 K C3	410	0.0016	0.0225	23038 K C3	210	0.0034	0.0400
22219 K C3	200	0.0017	0.0225	22319 K C3	430	0.0017	0.0236	23040 K C3	230	0.0035	0.0422
22220 K C3	230	0.0018	0.0236	22320 K C3	500	0.0018	0.0250	23044 K C3	240	0.0039	0.0459
22222 K C3	270	0.0019	0.0258	22322 K C3	580	0.0019	0.0272	23048 K C3	210	0.0043	0.0495
22224 K C3	280	0.0021	0.0275	22324 K C3	630	0.0021	0.0295	23052 K C3	250	0.0046	0.0536
22226 K C3	300	0.0023	0.0295	22326 K C3	680	0.0023	0.0314	23056 K C3	220	0.0050	0.0570
22228 K C3	340	0.0025	0.0317	22328 K C3	730	0.0025	0.0333	23060 K C3	250	0.0053	0.0611
22230 K C3	360	0.0027	0.0336	22330 K C3	760	0.0027	0.0356	23064 K C3	230	0.0057	0.0645
22232 K C3	370	0.0028	0.0358	22332 K C3	740	0.0028	0.0378	23068 K C3	260	0.0060	0.0689
22234 K C3	400	0.0030	0.0381	22334 CKK	760	0.0030	0.0400	23072 K C3	230	0.0064	0.0720
22236 K C3	360	0.0032	0.0397	22336 K C3	740	0.0032	0.0420	23076 K C3	230	0.0067	0.0756
22238 K C3	370	0.0034	0.0417	22338 K C3	730	0.0034	0.0439				
22240 K C3	390	0.0035	0.0439	22340 K C3	740	0.0035	0.0461				
22244 K C3	420	0.0039	0.0481	22344 K C3	810	0.0039	0.0511				
22248 K C3	470	0.0043	0.0528	22348 K C3	800	0.0043	0.0553				
22252 K C3	470	0.0046	0.0564	22352 K C3	810	0.0046	0.0595				
22256 K C3	420	0.0050	0.0600	22356 K C3	820	0.0050	0.0636				
22260 K C3	420	0.0053	0.0636								
22264 K C3	440	0.0057	0.0681								

Pressures are for an HMV(C) E Series nuts
Nut size = Bearing size

* Values for hydraulic pressure and axial drive-up are provided as a guide. Actual pressures may vary due to bearing brand. Drive-Up may also vary depending on start position. Measure the internal clearance in the bearing to verify accurate mounting.

231 Series Bearing	Hydraulic Pressure*	Radial Clearance Reduction	Axial Drive-Up*	232 Series Bearing	Hydraulic Pressure*	Radial Clearance Reduction	Axial Drive-Up*
	psi	in	in		psi	in	in
23120 K C3	200	0.0018	0.0231	23218 K C3	240	0.0016	0.0214
23122 K C3	210	0.0019	0.0247	23220 K C3	280	0.0018	0.0233
23124 K C3	250	0.0021	0.0270	23222 K C3	340	0.0019	0.0256
23126 K C3	230	0.0023	0.0286	23224 K C3	360	0.0021	0.0275
23128 K C3	240	0.0025	0.0306	23226 K C3	370	0.0023	0.0295
23130 K C3	320	0.0027	0.0328	23228 K C3	440	0.0025	0.0317
23132 K C3	320	0.0028	0.0350	23230 K C3	450	0.0027	0.0336
23134 K C3	310	0.0030	0.0367	23232 K C3	470	0.0028	0.0358
23136 K C3	330	0.0032	0.0386	23234 K C3	490	0.0030	0.0378
23138 K C3	360	0.0034	0.0409	23236 K C3	460	0.0032	0.0395
23140 K C3	370	0.0035	0.0431	23238 K C3	470	0.0034	0.0417
23144 K C3	390	0.0039	0.0470	23240 K C3	500	0.0035	0.0439
23148 K C3	380	0.0043	0.0506	23244 K C3	540	0.0039	0.0481
23152 K C3	410	0.0046	0.0547	23248 K C3	620	0.0043	0.0525
23156 K C3	370	0.0050	0.0581	23252 K C3	660	0.0046	0.0570
23160 K C3	400	0.0053	0.0623	23256 K C3	600	0.0050	0.0603
23164 K C3	450	0.0057	0.0667	23260 K C3	630	0.0053	0.0645
23168 K C3	490	0.0060	0.0709	23264 K C3	670	0.0057	0.0689
23172 K C3	470	0.0064	0.0748	23268 K C3	720	0.0060	0.0731
23176 K C3	410	0.0067	0.0775	23272 K C3	670	0.0064	0.0767